

GUCCI

INSTRUCTIONS FOR USE
GUCCI HANDMASTER
WATCHES

GUCCI

WARRANTY

Gucci offers a 2 year international warranty for its timepieces, valid from the date of purchase. The warranty is only valid if the warranty certificate has been duly completed by the dealer upon purchase. The warranty certificate must include the name or model number, the serial number, and the date of purchase. The warranty covers any fault arising from defective parts or a manufacturing flaw.

For any service or repair operation, your Gucci watch must only be entrusted to one of our Gucci watch branch repair centers, as listed at the end of this warranty booklet.

The Gucci watch branch reserves the right to repair or replace components required for your watch to function correctly.

The warranty does not cover:

- damage or faults caused by an accident, inappropriate use or negligence
- damage caused by normal wear of the case, the strap and its buckle, the crown, the bezel or the crystal
- normal wear and ageing of any material
- use of the watch not in accordance with the general recommendations on the next page
- the watch, or one of its components, if it has undergone an operation by a third party other than a Gucci watch branch

General recommendations

To ensure your watch provides complete satisfaction for many years to come, please follow the instructions listed below:

- Avoid placing your watch near devices generating strong magnetic fields.
- Whenever possible avoid any impact that might damage your watch or affect its running.
- Avoid exposing your watch to extreme temperatures or temperature variations (solar radiation, halogen spotlight, etc.).
- Avoid direct contact with solvents, detergents, perfumes, mosquito repellent or any chemicals, since they may damage your watch's components.
- The water resistance of your watch has been tested to at least a pressure of 5 bar, approximately corresponding to a depth of 50 meters. However, the absolute water resistance of a watch may not be permanently guaranteed. It may be affected by ageing of the gaskets, accidental impact on the crown or crystal and other external factors. We recommend having your watch's water resistance tested by a Gucci watch branch repair center once a year.
- Make sure that the crown is always pushed back into the normal running position, to prevent moisture or dust penetrating into the case.
- Use soapy water and a soft brush for cleaning the water resistant case. Rinse with clean water to eliminate washing residue. Never use cleaning agents. Wipe down with a soft cloth.

Natural materials

Strap made from leather and other skins, straps made from natural materials:

Since these materials are natural, be sure to protect your strap from prolonged exposure to the sun and moisture, so as not to alter its shape and color.

Avoid immersion situations such as wearing when swimming.

The characteristics of natural materials mean that their structure and irregularities may be visible, which makes each piece unique and exclusive.

Protecting the environment




Spent watch components must not be disposed of in the rubbish bin, but be recycled properly, in accordance with current national laws. We recommend in particular taking them back to your outlet.

GUCCI

INSTRUCTIONS FOR USE

Instructions for watches with GP3300 Sowind Manufactures automatic movement.

Display and functions

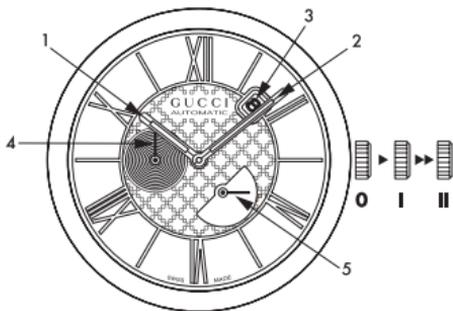

Display and functions

- 1 Hour
- 2 Minute
- 3 Date
- 4 Small second
- 5 Power reserve indicator

Crown

- 0 Manual movement winding
- I Date correction
- II Time setting

GUCCI

Automatic watches draw their energy from an oscillating weight activated by the natural movements of your wrist. This winds the watch.

The minimum power reserve is 46 hours. If the watch has stopped (e.g. if it has not been worn for a long time or in case of limited activity), it must be wound manually with the crown in position 0.

Note: the accuracy of the time is influenced by how the watch is worn.
Normal running position: crown in position 0, against the case.

Correcting the date: pull out the crown to position I and turn it clockwise until the desired date is displayed. Push the crown back into position 0.

During this operation, your watch will keep running, so the time does not need to be corrected.

Setting the watch time: pull out the crown to position II, the second hand will stop: turn it clockwise or anti-clockwise to the desired time. Push the crown back into position 0.

Make sure that the date changes at midnight, and not at midday.

NB: do not correct the date between 8 p.m. and 2 a.m. because this may damage the movement.

Power reserve


The power reserve indicator shows the current winding status of the timepiece.

GUCCI

INSTRUCTIONS FOR USE

Instructions for watches with GP2700 Sowind Manufactures automatic movement.

Display and functions

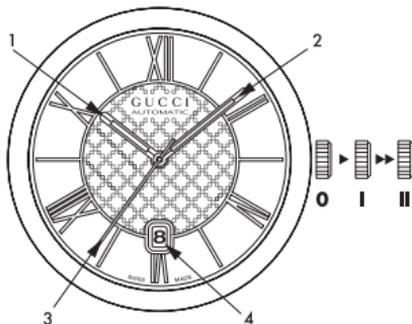

Display and functions

- 1 Hour
- 2 Minute
- 3 Second
- 4 Date

Crown

- 0 Manual movement winding
- I Date correction
- II Time setting

GUCCI

Automatic watches draw their energy from an oscillating weight activated by the natural movements of your wrist. This winds the watch.

The minimum power reserve is 36 hours. If the watch has stopped (e.g. if it has not been worn for a long time or in case of limited activity), it must be wound manually with the crown in position 0.

Note: the accuracy of the time is influenced by how the watch is worn.

Normal running position: crown in position 0, against the case.

Correcting the date: pull out the crown to position I and turn it clockwise until the desired date is displayed. Push the crown back into position 0.

During this operation, your watch will keep running, so the time does not need to be corrected.

Setting the watch time: pull out the crown to position II, the second hand will stop: turn it clockwise or anti-clockwise to the desired time. Push the crown back into position 0.

Make sure that the date changes at midnight, and not at midday.

NB: do not correct the date between 8 p.m. and 2 a.m. because this may damage the movement.